 
 
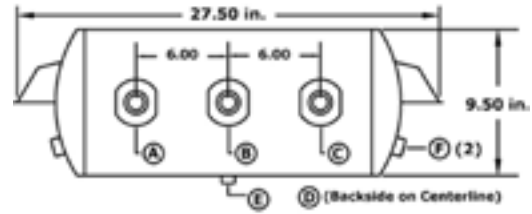 
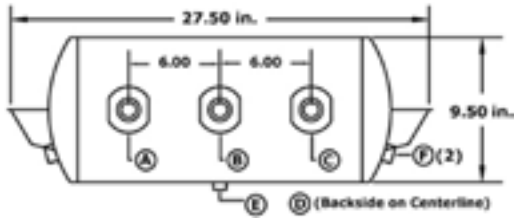 


## AIR TANKS

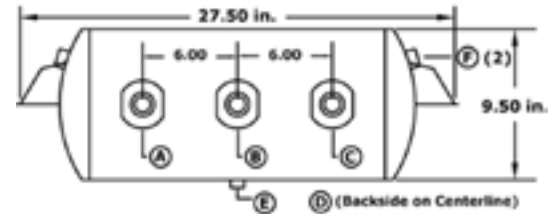

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-9501		3/4"			1/4"	3/8"
HT-9504						
HT-9507	3/4"		3/4"			1/2"
HT-95107		1/2"		1/2"		
HT-95119	3/4"		3/4"			3/8"
HT-9534		3/4"		3/4"		1/2"
HT-9537						
HT-9539						3/8"
HT-9543		1/2"				3/8"
HT-9553	3/4"		3/4"	3/4"		1/2"
HT-9562						
HT-9577		1/2"		1/2"		3/8"
HT-9578		3/4"				
HT-9587	1/2"		1/2"			

 
Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-9500		3/4"			1/4"	
HT-9508				3/4"		3/8"
HT-95118				1/2"		
HT-9512		1/2"				1/2"
HT-9513	1/2"	3/4"	1/2"			3/8"
HT-9515		1/2"		1/2"		
HT-95156	3/4"		3/4"			
HT-95161				3/4"		
HT-9518		3/4"				1/2"
HT-9522		1/2"		1/2"		3/8"
HT-9523						
HT-9533		3/4"		3/4"		1/2"
HT-9538		None			3/8"	
HT-9542	1/2"		1/2"			
HT-9572		3/4"				

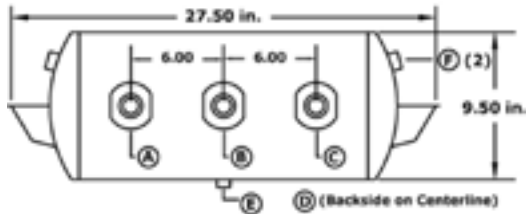

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-9503		3/4"			1/2"	3/8"
HT-9506		1/2"		1/2"	1/4"	1/2"
HT-95120						1/4"
HT-9526						3/8"
HT-9530		3/4"		3/4"		1/2"
HT-9541			1/2"			
HT-9544						3/8"
HT-9561		3/4"				
HT-9571						
HT-9575		1/2"		1/2"		3/8"
HT-9579		3/4"				
HT-9585	3/4"		3/4"	3/4"		1/2"
HT-9590						



Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-9502	1/2"		1/2"	1/2"	1/4"	1/2"
HT-9505		3/4"				3/8"
HT-9510						
HT-95116	3/4"		3/4"			1/2"
HT-9514		1/2"				3/8"
HT-95149	3/4"		3/4"			
HT-95162				3/4"		
HT-9528		3/4"				3/8"
HT-9529						
HT-9531		1/2"		1/2"		1/2"
HT-9532						
HT-9547		3/4"		3/4"		1/2"
HT-9568		1/2"			3/8"	

### AIR TANKS

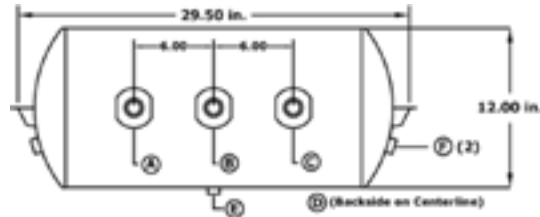



Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-1200		3/4"			1/4"	3/8"
HT-1204				3/4"		1/2"
HT-1205						3/8"
HT-1206				1/2"		1/2"
HT-1209			3/4"		3/8"	
HT-12130	3/4"		3/4"			1/2"
HT-1219			3/4"			3/8"

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-1229	3/4"		3/4"		1/4"	3/8"
HT-1232		1/2"		1/2"		
HT-1237	1/2"		3/4"		3/8"	3/8"
HT-1238		3/4"		3/4"		
HT-1239	3/4"		3/4"		1/4"	1/2"
HT-1257		1/4"				1/4"
HT-1266		1/2"				3/8"

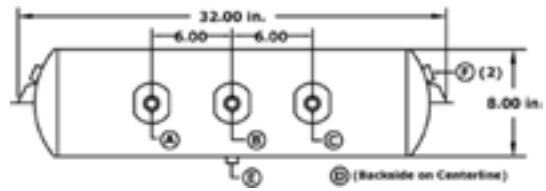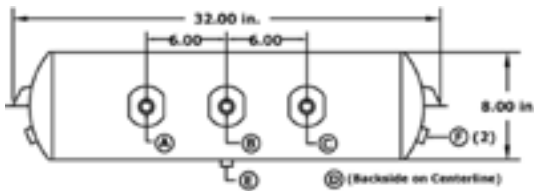  

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-8008		3/4"		3/4"	1/4"	1/2"
HT-8013						
HT-8014				3/4"		
HT-8015		1/2"	1/2"		3/8"	
HT-8020		3/4"				
HT-8029						
HT-8068	3/4"		3/4"			


Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-8001		3/4"			1/4"	3/8"
HT-8007				3/4"		
HT-80115						
HT-8012				3/4"	1/4"	1/2"
HT-8016		1/2"		1/2"		3/8"
HT-8022	3/4"		3/4"			
HT-8036	1/2"	1/2"	1/2"	1/2"		
HT-8037	3/4"		3/4"	3/4"		
HT-8060		1/2"				

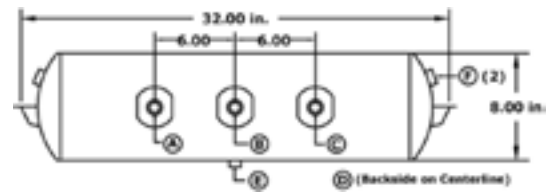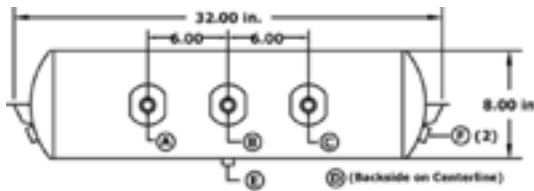  

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-8000		3/4"			1/4"	3/8"
HT-8030	3/4"		3/4"			1/2"
HT-8041		3/4"			3/8"	
HT-8047	3/4"		3/4"	3/4"		
HT-8052		3/4"				
HT-8085		1/2"		1/2"		



Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-80103	1/2"		1/2"	1/2"	1/4"	3/8"
HT-8031		3/4"				
HT-8034					3/4"	

## AIR TANKS

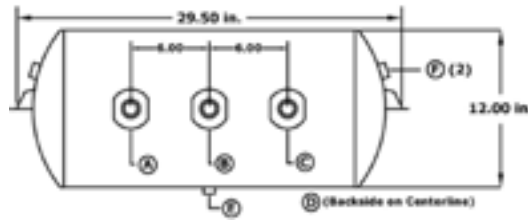 

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-1207	3/4"		3/4"		1/4"	1/2"
HT-1210			1/2"	1/2"		
HT-12112	1/2"		3/4"		1/4"	3/8"
HT-12127			1/2"			
HT-1214		3/4"			1/4"	3/8"
HT-1216		1/2"		1/2"		
HT-1217	3/4"		3/4"		1/4"	3/8"
HT-1218				1/2"		
HT-1222		1/2"				3/8"

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-1243		1/2"		3/4"	1/4"	3/8"
HT-1247	1/2"		1/2"	1/2"		
HT-1248	3/4"	3/4"	3/4"	3/4"	1/4"	3/8"
HT-1254						
HT-1255	1/2"	1/2"	1/2"	1/2"	1/4"	3/8"
HT-1270		3/4"		3/4"		
HT-1275					1/4"	1/2"
HT-1276	3/4"		3/4"			

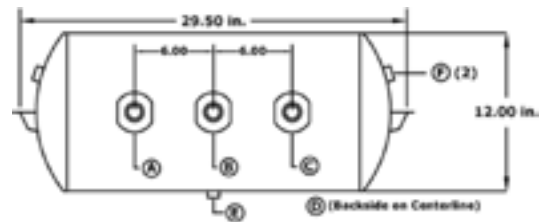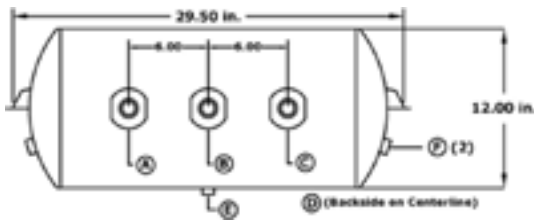  

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-12100				1/2"	1/4"	3/8"
HT-1211		3/4"				
HT-1213					1/4"	1/2"
HT-1223						
HT-1226		1/2"		1/2"	1/4"	3/8"
HT-1230						
HT-1231	3/4"		3/4"		1/4"	3/8"
HT-1235		3/4"		3/4"		
HT-1242					1/4"	1/2"
HT-1249	3/4"		3/4"			
HT-1280	1/2"		1/2"	1/2"	1/4"	3/8"
HT-1292						
HT-1293	3/4"		3/4"		1/4"	1/2"
HT-1294		3/4"	3/4"	3/4"		

Part Number	Main Port A	Main Port B	Main Port C	Main Port D	Drain Port E	Drain Port F
HT-1208		3/4"			1/4"	3/8"
HT-12102		1/2"		3/4"		
HT-12104	1/2"		1/2"	1/2"	1/4"	3/8"
HT-1250						
HT-1253	3/4"		3/4"	3/4"	1/4"	1/2"
HT-1260		1/2"				
HT-1273				1/2"	1/4"	3/8"
HT-1274	3/4"		3/4"			
HT-1279		3/4"			1/4"	1/2"
HT-1282	3/4"		3/4"	3/4"		
HT-1297		3/4"				3/8"

AIR TANKS